
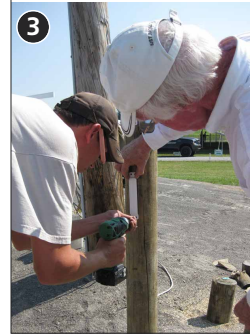


HORSERAIL® – LINE POST BRACKET ATTACHMENT

1 Mark all posts. (see “How To Mark Posts” PDF)

- For the best looking fence the rails should be placed equal distance apart.
- Find the center tangent of each post - this will reduce binding.
- Use a tape measure or a marking board to locate and mark the top of each bracket - from the top down.

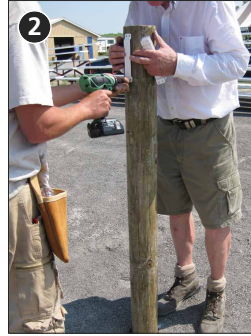

2 Attach Top Line Post Brackets (see Diagram A)

- Bottom holes only.
- Use four wide shoulder, hex head drive screws for each bracket.

3 Attach Line Post Brackets (see Diagram A)

- Bottom holes only.
- Use four wide shoulder, hex head drive screws for each bracket.




4 Bracket must be at right angle to rail - allowing for movement. (see Diagram D)

5 Payout rail and insert into brackets.

- To best protect the rail - Use either a “Payout Box” or an oversized spinning jenny.
- Lift and slide rail in place. (see Diagram B)

6 Finish attaching all brackets to line and end posts. (see Diagram C)

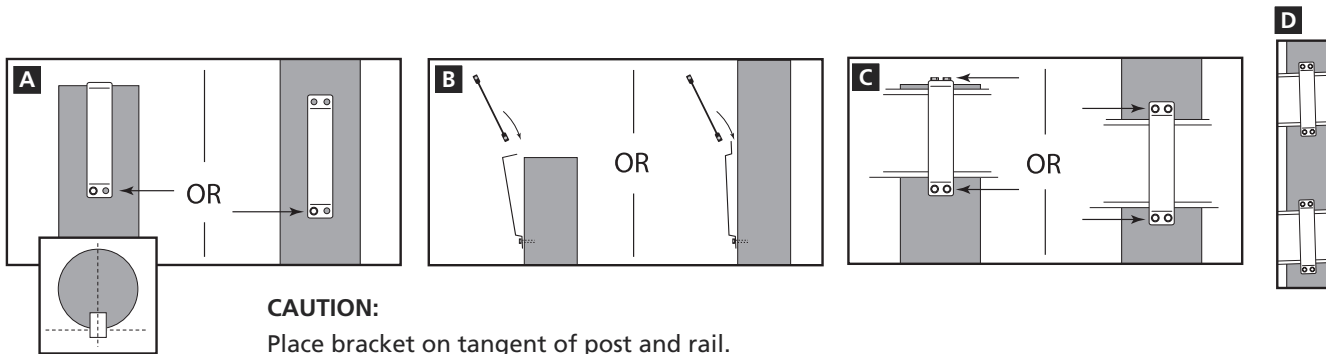

CAUTION:

Place bracket on tangent of post and rail.
If the bracket is off center it will pinch or bind the rail when tensioning.

Horserail® Products

- Top Line Post Bracket
- Line Post Bracket
 - Colors: White, Black and Brown
 - Sizes: 4", 5" and 6" (10cm, 13cm, and 15cm)

Other Tools Needed

- Payout Box or Oversized Spinning Jenny
- Impact Wrench
- Wide shoulder, hex head drive screws

Other Related PDF Info Sheets

- How to Mark Posts
- How to Cut Rail

For More Details,
Tips & Techniques
on Building Fences,
Please visit our website:
www.horserail.com



SAFETY FIRST: USE SAFETY EYE GLASSES AND GLOVES.